



Resetting a Radlok



← A reset Radlok will look like this (see left)



A triggered Radlok will look like one of these



Figure 1



Figure 2

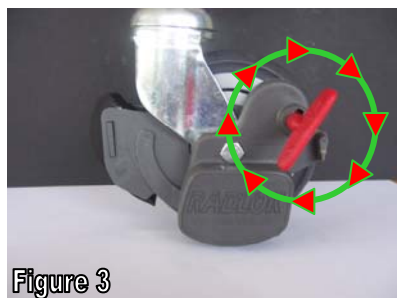


Figure 3

1. Insert key (see figure 1)
2. Lift and hold the Brake foot to the top of the Castor (before turning key) (see figure 1)
3. Turn key anti-clockwise until the key stops / or a click is heard. (see figure 2)
4. The Brake foot can now be released.
5. Complete steps 1 – 4 for the second Radlok fitted to the trolley.
6. Return the trolley well inside the perimeter of the system with both keys still in place.
7. The key can now be removed and ***must*** be turned clockwise and removed. (see figure 3)